GUARANTEE

Please keep your receipt as this will be required for any claims under this guarantee.
This appliance is guaranteed for 3 years after your purchase as described in this document.

During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back to the place of purchase, with your till receipt and a copy of this guarantee.

The rights and benefits under this guarantee are additional to your statutory rights, which are not affected by this guarantee. Only Holmes Products (Europe) Ltd. (“Holmes”) has the right to change these terms.

Holmes undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly free of charge provided that:

- you promptly notify the place of purchase or Holmes of the problem; and
- the appliance has not been altered in any way or subjected to damage, misuse, abuse, repair or alteration by a person other than a person authorised by Holmes.

Faults that occur through, improper use, damage, abuse, use with incorrect voltage, acts of nature, events beyond the control of Holmes, repair or alteration by a person other than a person authorised by Holmes or failure to follow instructions for use are not covered by this guarantee. Additionally, normal wear and tear, including, but not limited to, minor discoloration and scratches are not covered by this guarantee.

The rights under this guarantee shall only apply to the original purchaser and shall not extend to commercial or communal use.

If your appliance includes a country-specific guarantee or warranty insert please refer to the terms and conditions of such guarantee or warranty in place of this guarantee or contact your local authorized dealer for more information.

Waste electrical products should not be disposed of with Household waste. Please recycle where facilities exist. E-mail us at enquiriesEurope@jardencs.com for further recycling and WEEE information.

Holmes Products (Europe) Limited
1 Francis Grove
London
SW19 4DT
UK

BIONAIRE®

Holmes Products (Europe) Ltd.
1 Francis Grove
London SW19 4DT
England

Fax: +44 (0)20 8947 8272
Email: enquiriesEurope@jardencs.com
Website address: www.bionaire.com
UK - Free phone Customer Service Helpline – 0800 052 3615

APPROVED
By Steven Bauer at 8:18 am, Jun 09, 2009

CE

© 2009 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.
Distributed by Holmes Products (Europe) Ltd., 1 Francis Grove, London SW19 4DT, United Kingdom.

Printed in PRC

123632/9100010011103
BASF1415IUK09EM1

BIONAIRE®

pure indoor living

STAND FAN

MODEL: BASF1415

INSTRUCTION MANUAL

BASF1415 Fig. 1

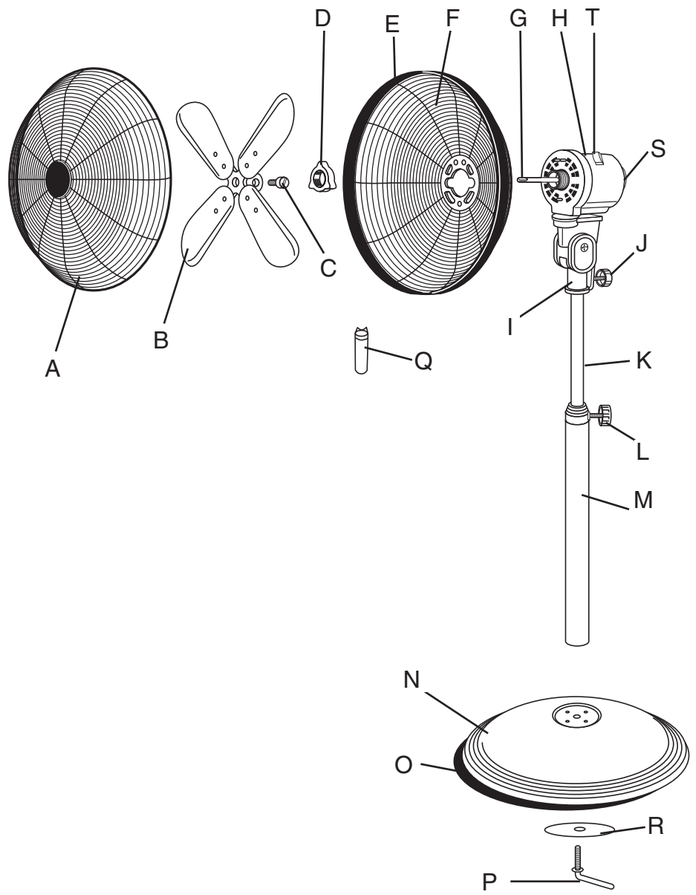

U.K. AND IRELAND

PLEASE READ AND SAVE THESE INSTRUCTIONS

IMPORTANT INSTRUCTIONS
When using electrical appliances, basic safety precautions should always be taken including the following:

- Use the fan only for purposes described in the instruction manual.
- To protect against electrical shock, do not immerse the fan, plug or cord in water or spray with liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the electrical outlet when not in use, when moving the fan from one location to another, before putting on or taking off parts and before cleaning.
- Avoid contact with any moving parts.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Do not operate any appliance with a damaged cord, plug, after the appliance malfunctions, or has been dropped/damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or come into contact with hot surfaces.
- To disconnect from the electrical supply, grip the plug and pull from the wall outlet. DO NOT pull on the cord.
- Always use on a dry, level surface.
- Do not operate without the fan grills properly in place.
- This product is intended for household use ONLY and not for commercial or industrial applications.
- If the supply cord or plug is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

MISSING A PART FOR YOUR FAN?
Please call 0800 052 3615 for assistance.

ASSEMBLY INSTRUCTIONS (See Fig 1.)
Base/Pole assembly
You will need the base cover (N), weight (O), pole (K,M), washer (R) and L-shaped locking lever (P).

1. Turn the base cover upside down and place the weight into the base cover.
2. Insert the threaded end of the L-shaped locking lever into the hole of the washer, weight and through the base cover.
3. Whilst holding the base cover and weight with one hand, connect the pole to the base, sliding the L-shaped locking lever into the bottom of the pole (M) with your other hand.
4. Turn the L-shaped locking lever clockwise to securely attach the pole to the base.
5. Set the base on the floor, weight side down.

Fan head assembly
You are now ready to assemble the fan head

1. Unscrew rear grill mounting nut (D) before positioning the rear grill (F) over the motor shaft (G) making certain that the notches at the top and bottom of the rear grill, fit over the prongs on the motor housing (H).
2. Secure the rear grill in its place using the rear grill mounting nut (D). Turn this nut clockwise and tighten firmly.
3. Slide the fan blade (B) with the hollowed interior of the blade facing toward the rear grill, firmly onto the motor shaft. The top of the motor shaft should lie even with the centre of the fan blade.
4. Now use the securing screw (C) (already attached to the Fan Blade) to lock the blade into place. Tighten the screw into the side hole of the fan blade, against the motor shaft, until both the blade and screw are secure.
5. Centre the front grill (A) by aligning the Bionaire logo on the logo plate so that it is horizontal and parallel with the floor. Then, holding the front grill against the rear grill, push the black grill ring (E) into place at the top and bottom of the fan. (Push directly on the black grill ring, not on the grills themselves). Finish securing the grill ring in the same manner until both grills are joined underneath the black ring.

Final assembly

1. Slide the inner pole extension (K) up from the outer pole (M). Insert the pole locking knob (L) into the hole on the outer pole, to securely hold this position.
2. Place the fan head assembly into this extension pole, inserting the neck of the fan into the pole opening. Turn the fan head's neck until the head is securely locked into place.
3. Add the tilt adjustment knob (J) to the hole in the fan head's neck (I). Tighten when the fan head is in your desired position.

Converting to a table fan -
On model BASF1415 an additional short pole (Q) is supplied which allows the fan to be converted into a table fan. To change to this short pole, remove the fan head assembly from its position on top of the inner pole and unscrew the L-shaped locking lever at the base. Remove the long pole, replace with the short pole and reassemble as detailed above.

OPERATING INSTRUCTIONS

1. Set the fan base on a dry level surface
2. Make sure the Selector (Speed) Control (S) is in the OFF(**0**) position. Selector (Speed) Control (S) is located on the top of the fan motor housing.
3. Plug the cord into a suitable 220-240V. AC outlet.
4. The SPEED is adjusted by turning the Selector (Speed) Control (S) to the desired setting:- **0-III-II-I**.
5. The OSCILLATION control (T) is located on the top of the fan motor housing. To start oscillation, push the control knob down. To stop oscillation, pull the control knob up.

ADJUSTMENT
Tilt adjustment
Follow these instructions to tilt the fan head for upward angle air movement.

1. To change the tilting angle of the fan head, simply loosen the tilt adjustment knob (J)
2. Move the fan head to the desired angle, then firmly tighten the knob to lock in place.

Height adjustment
Follow these instructions to adjust the height of the fan.

1. Turn the pole locking knob (L) anti-clockwise to loosen the pole.
2. Adjust the pole to the desired height and firmly tighten the locking knob in a clockwise direction.

CLEANING AND MAINTENANCE
Follow these instructions to correctly and safely care for your Bionaire® fan. Please remember:-

- Always unplug the fan before cleaning or assembly.
- Do not allow water to drip on or into the fan motor housing.
- Be sure to use a soft cloth, moistened with a mild soap solution.
- Do not use any of the following as a cleaner: petrol, thinners or benzene.

Fan Blade cleaning
(See instructions for fan head assembly)

1. To access the fan blade, remove the front grill and securing screw.
2. Clean the fan blade, front and rear grills with a soft moist cloth.
3. Replace the fan blade, tighten screw and securely fasten the front grill.

Fan head, base and pole cleaning
Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base, pole and head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

FAN STORAGE
Your fan can be stored either partially disassembled or assembled.
It is important to keep it in a safe, dry location.

- If stored disassembled, we recommend using the original (or appropriately sized) box.
- If stored assembled or partially assembled, remember to protect the fan head from dust.

FOR U.K. AND IRELAND ONLY:
If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type. Please refer to "Installation of a plug" below.

Installation of a plug Applicable to U.K. and Ireland

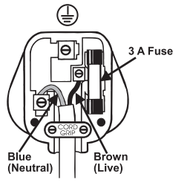

NOTE: If the terminals in the plug are not marked or if you are unsure or in doubt about the installation of the plug please contact a qualified electrician.
If a 13A 3-pin plug is fitted, it must be an ASTA approved plug, conforming to BS1363 standard. Replacement 3A fuses must be BSI or ASTABS1362 approved.
This product is fitted with a 13A plug complying to BS1363. If this plug is unsuitable or needs to be replaced, please note the following:
The wires in the mains lead are coloured as such:

BROWN - LIVE
BLUE - NEUTRAL

Please note that the colour of these mains wires may not correspond with the colour markings that identify the terminals in your plug. Please proceed as follows:
The BROWN coloured wire must be connected to the terminal, which is marked with the letter "L" or is coloured RED.
The BLUE coloured wire must be connected to the terminal, which is marked with the letter "N" or is coloured BLACK.
DO NOT CONNECT either of these wires to the earth terminal in the plug. The earth terminal plug is marked with the letter "E", or with the earth symbol ⏚ , or coloured GREEN, or GREEN and YELLOW.